


Before you start please ensure the fan is switched off




STEP 1
Remove duct tape from base unit and remove

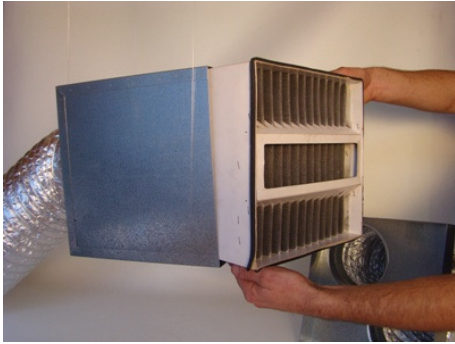

STEP 2
Remove the dirty filter.



STEP 3
Install the new HVE filter into the base unit, ensuring the black seal is facing outward before in-

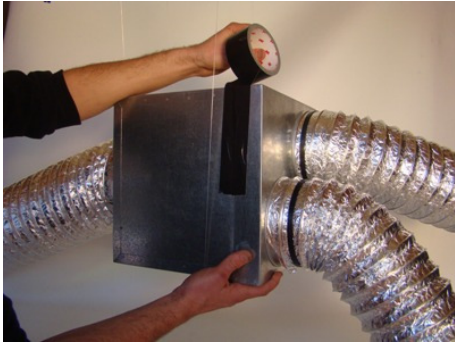

STEP 4
Re-tape base unit together with duct tape.



STEP 5
Your unit is now ready for use.

Filtercorp International Limited
0800 481 9999

www.filtercorp.biz

Home Ventilation Filter suitable for HRV system Installation Instructions

