

## IMPORTANT INFORMATION

Before you start please ensure that the fan is switched off.

Read and follow the maintenance instructions in the Operating Guidelines of your unit.

Normal practice is to replace the filter every twelve months.



**STEP 1**  
Remove cable tie from inlet



**STEP 2**  
Remove cage from old filter



**STEP 3**  
Slide cage into new filter



**STEP 4**  
Slip elasticated end of new filter over inlet flange