

IMPORTANT INFORMATION

Before you start please ensure that the fan is switched off.

Read and follow the maintenance instructions in the Operating Guidelines of your unit.

Normal practice is to replace the filter every twelve months.



STEP 1
Remove cable tie from inlet



STEP 2
Remove cage from old filter



STEP 3
Slide cage into new filter



STEP 4
Slip elasticated end of new filter over inlet flange